



HOW TO OPERATE YOUR EVERSARP PEN

Keep the pen clean. Every two months, flush the pen three or four times with cold water, work the lever just as you do when filling with ink. When refilling with ink, after cleaning, work the lever once or twice so as to be sure no water remains in the pen barrel to mix with the ink.

WHEN TO FILL—Unlike other pens, this Eversharp will write more words down to the last drop of ink—you don't have to refill when two-thirds empty.

HOW TO FILL—Immerse entire pen point in ink. Snap lever up and down several times. Then close lever tightly. Leave point in ink a few seconds. Remove and wipe surplus ink from pen point and holder.





S E R V I C E

Guaranteed Forever

If your Eversharp Pen — identified by the double check mark on the clip — fails to give satisfactory service at any time, we will put it in good order for a flat charge of 35c to cover postage, insurance and handling — provided all parts — regardless of their condition — are returned to Eversharp, Inc. Slightly higher if handled by your dealer. This service is guaranteed — not for years — not for life — but Guaranteed Forever. If any other than genuine Eversharp parts are returned the guarantee is void, but may be reinstated by having the Pen properly repaired with genuine Eversharp parts at regular list prices.



Tune in

PHIL BAKER CBS SUNDAY NIGHTS
IN "TAKE IT OR LEAVE IT"