ф Ь∀ВКЕВ



Ink Refill under Pad

Parker Floating Ball Pens

Parker's unique Floating Ball pen point lets you glide across the page with a crisp line of liquid ink...like a fountain pen.

A refill for your pen is located under the gift box pad. When you wish to change the refill, simply **pull** off the cap and **unscrew** the front end from the barrel. Remove empty refill. A slight pull will separate it from the front end. Uncap new refill and insert into front end. Discard refill cap. Screw barrel and front end together again so they're tight. Your pen is refilled and ready to write.

Every Parker Floating Ball pen refill will fit all Parker Floating Ball pen cases. There are three types of refills to fit your Pen: Floating Ball, Super Soft Tip and Stylus.

Parker Pencils

Mechanical Pencils

Parker mechanical pencils come ready to write. When you wish to reload your pencil, first make sure the old lead is ejected by turning cap clockwise until mechanism comes to a stop. Then turn cap counter-clockwise until same action occurs. Insert new lead into the tip and push in. Turn the cap clockwise until lead projects about 1/8" Press the point gently against paper to seat new lead.

Cartridge Pencils

Parker cartridge pencils are factory-filled and ready to write. When you wish to change the refill, simply unscrew the front end from the cap. Remove the old refill and replace it with a new refill, making sure it rides freely in the spring. Screw the front end and cap back together.

JANESVILLE, WISCONSIN 53545

Congratulations...

You now own one of the world's finest writing instruments ... a Parker. Every Parker product is the culmination of painstaking research and craftsmanship; a tradition of Parker skill and quality that dates from 1888.



Ink Cartridge under Pad



To Fill from Ink Bottle



To Convert to Cartridge

Parker Fountain Pens

Your pen can be filled with Super Quink bottled ink. Or, if you prefer, remove the filling unit and insert the convenient Parker Super Quink ink cartridge located under the gift box pad. Additional cartridges can be purchased wherever Parker pens are sold.

To fill from an ink bottle

Pull cap off pen, **unscrew** barrel from front end of pen. Immerse point in ink, press ribbed bar on filling unit four times. Remove excess ink from point with tissue, replace barrel.

To convert to a cartridge pen

Pull cap off pen, **unscrew** barrel from front end of pen. Pull out filling unit. Insert Parker Super Quink ink cartridge into front end of pen, push in firmly until you feel the cartridge seat itself. Replace barrel.

Parker 180

A unique design, this pen writes two ways: when the metal nib guide is on top, the pen will write a medium width line. Rotate the pen 180 degrees and the pen will write an extra fine line.

Care of your Parker fountain pen

Every fountain pen will function better if it is flushed out every six months. Simply remove the ink cartridge or converter and let a slow stream of cool water flow through the inside of the point section. Shake out any excess water and dry the point with tissue before refilling.

A sterling silver pen will acquire a delicate patina with regular use, further enhancing its rich appearance. Should tarnishing occur, clean it with a polishing cloth as you would with other fine precious metals. Avoid using strong cleaning agents, chemicals, etc.

Parker Ball Pens

Parker ball pens come with the long-writing Parker refill, already installed. When you wish to change the refill, simply unscrew the front end from the cap. Remove the old refill and replace it with a new refill, making sure it rides freely in the spring. Screw front end and cap back together.

All Parker ball pens accept the Parker refill, available in a variety of point sizes and colors.